

Registration of license

We provide the solution of whole steps by a manufacturing view to the customers of the world, and create the new Sheet Metal

Guide

Dr.ABE_Tube® and Dr.ABE_Tube logo is trademark of AMADA HOLDINGS CO., LTD.

Dr.ABE_Tube is a registered product of AMADA HOLDINGS CO., LTD.

The other described brand names and product names are trademarks or registered trademarks of their respective companies.

All Rights Reserved, Copyright© AMADA HOLDINGS CO., LTD 2007-2018

==== Contents =====

1. Introduction
2. Registration of license (In case that AP100 hasn't been installed)
 - 2.1 Installation of license module
 - 2.2 Registration of license
3. Registration of license (In case that AP100 has already been installed)
 - 3.1 Installation of license module
 - 3.2 Registration of license



1. Introduction

To use [Amada Dr.ABE Tube], it is necessary to register license and install license module.
After installing [Amada Dr.ABE Tube], please install license module and register license.


2. Registration of license

In case that AP100 hasn't been installed


2.1 Installation of license module

Step 1 Start up "setup.exe" in the "License¥Installer" folder in the installation CD.

Step 2 Specify a drive where [Amada Dr.ABE Tube] has been installed, and click [OK].

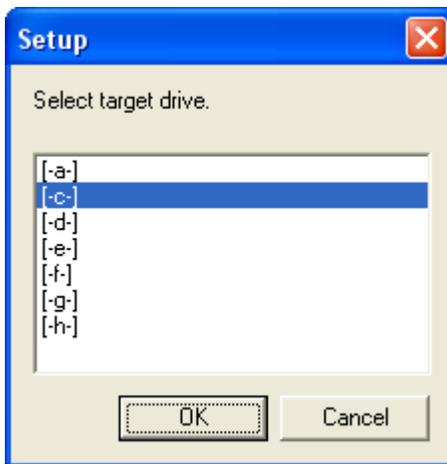

Step 3 If using parallel port type dongle license, click [Yes].

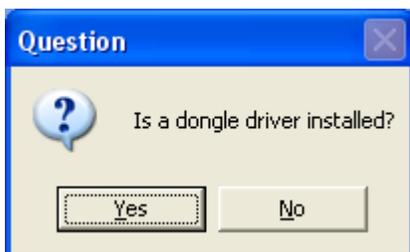

* If using software license or USB type dongle license, click [No].


Parallel port type dongle is not supported for 64bitOS.

Step 4 Installation is completed. Click **[OK]**.




* If using software license or USB type dongle license, this is the end of the installation of license module.

Step 5 Uncheck **[DOS-mode]**, and click **[Install]**.

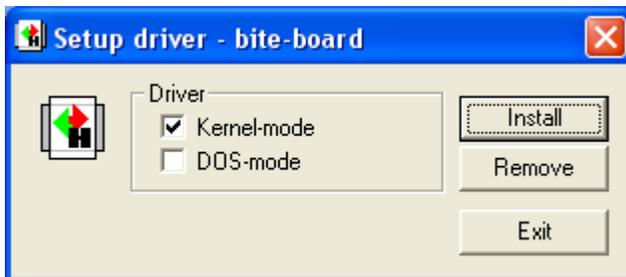

Step 6 Click **[Yes]** to reboot computer.

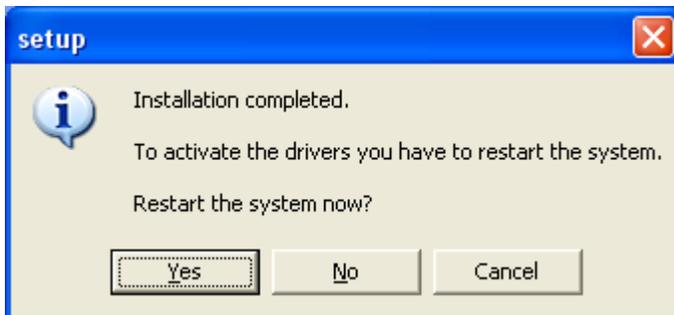

* Confirm that any other application isn't running, and then click **[Yes]**.

2.2 Registration of license


* When you use dongle license, please set a dongle to your computer first, and then perform registration of license.

Step 1 Start up the registration of license from the startup menu.
([Start]-[All Programs]-[ASIS100PCL]-[License Management]-[Register])


Step 2 Click [Registering license].



Step 3 If date in computer is correct, click [Registering license].

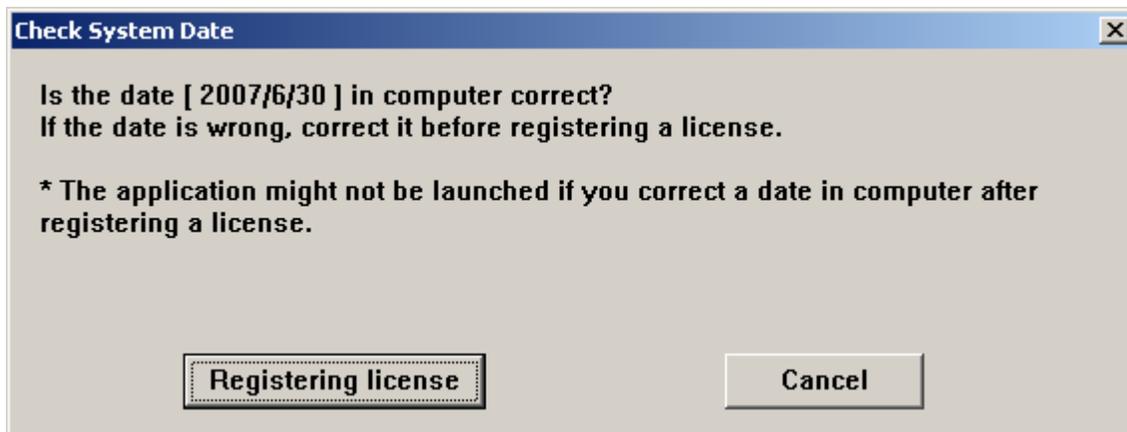

Step 4 Specify a user license, and click **[Open]**.

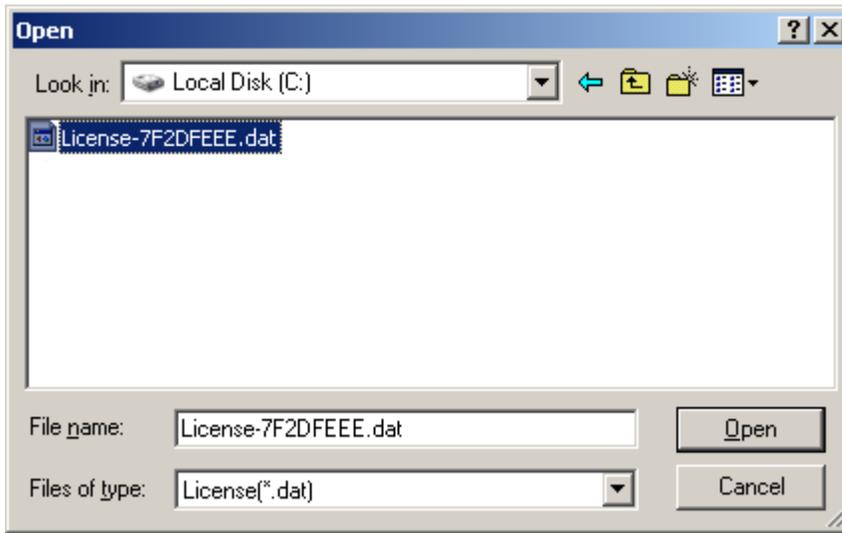

Step 5 Registration of license is completed. Click **[OK]**.



3. Registration of license

In case that AP100 has already been installed

3.1 Installation of license module

Step 1 Start up "setup.exe" in the "License¥Installer" folder in the installation CD.

Step 2 Installation is completed. Click [OK].




3.2 Registration of license

* When you use dongle license, please set a dongle to your computer first, and then perform registration of license.


Step 1 Start up the registration of license from the startup menu.

([Start]-[All Programs]-[ASIS100PCL]-[License Management]-[Register])


Step 2 Click [Registering license].

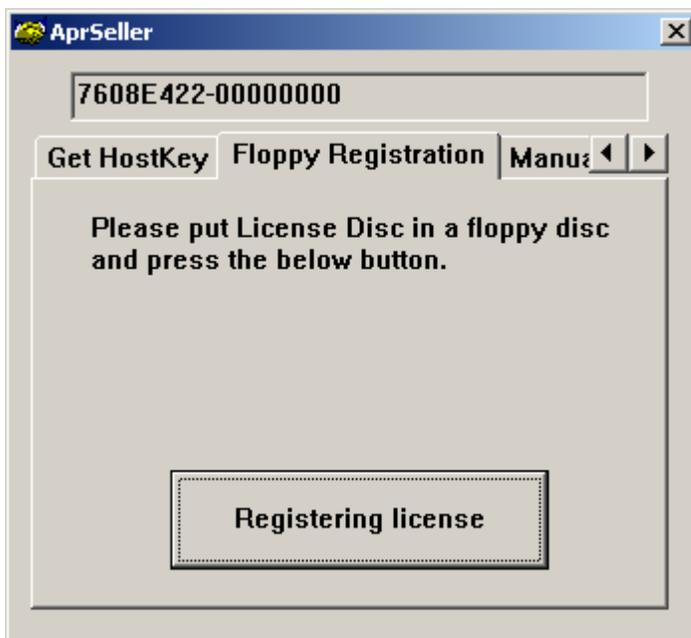

Step 3 If date in computer is correct, click [Registering license].

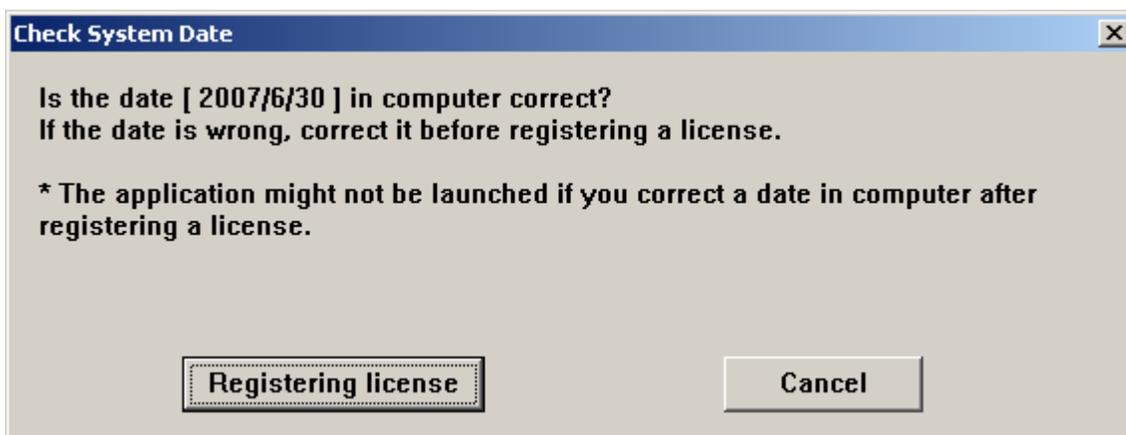

Step 4 Specify a user license, and click **[Open]**.

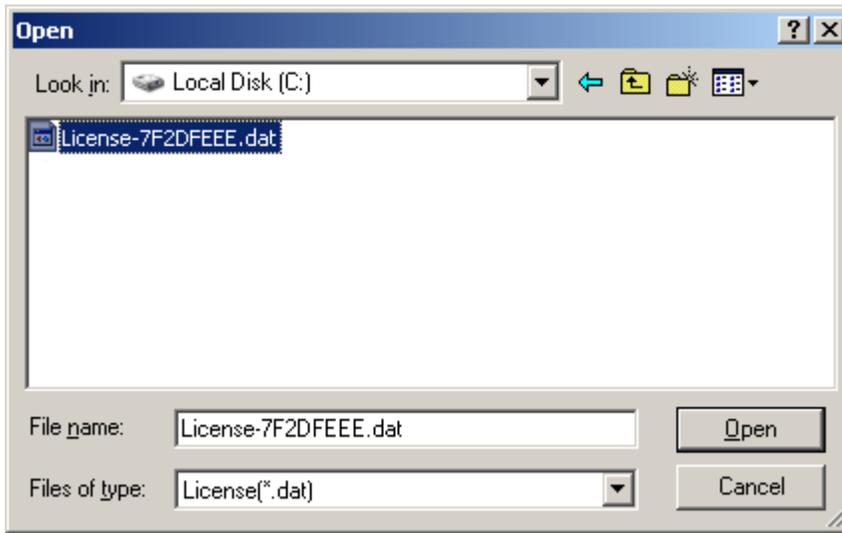

Step 5 Registration of license is completed. Click **[OK]**.

